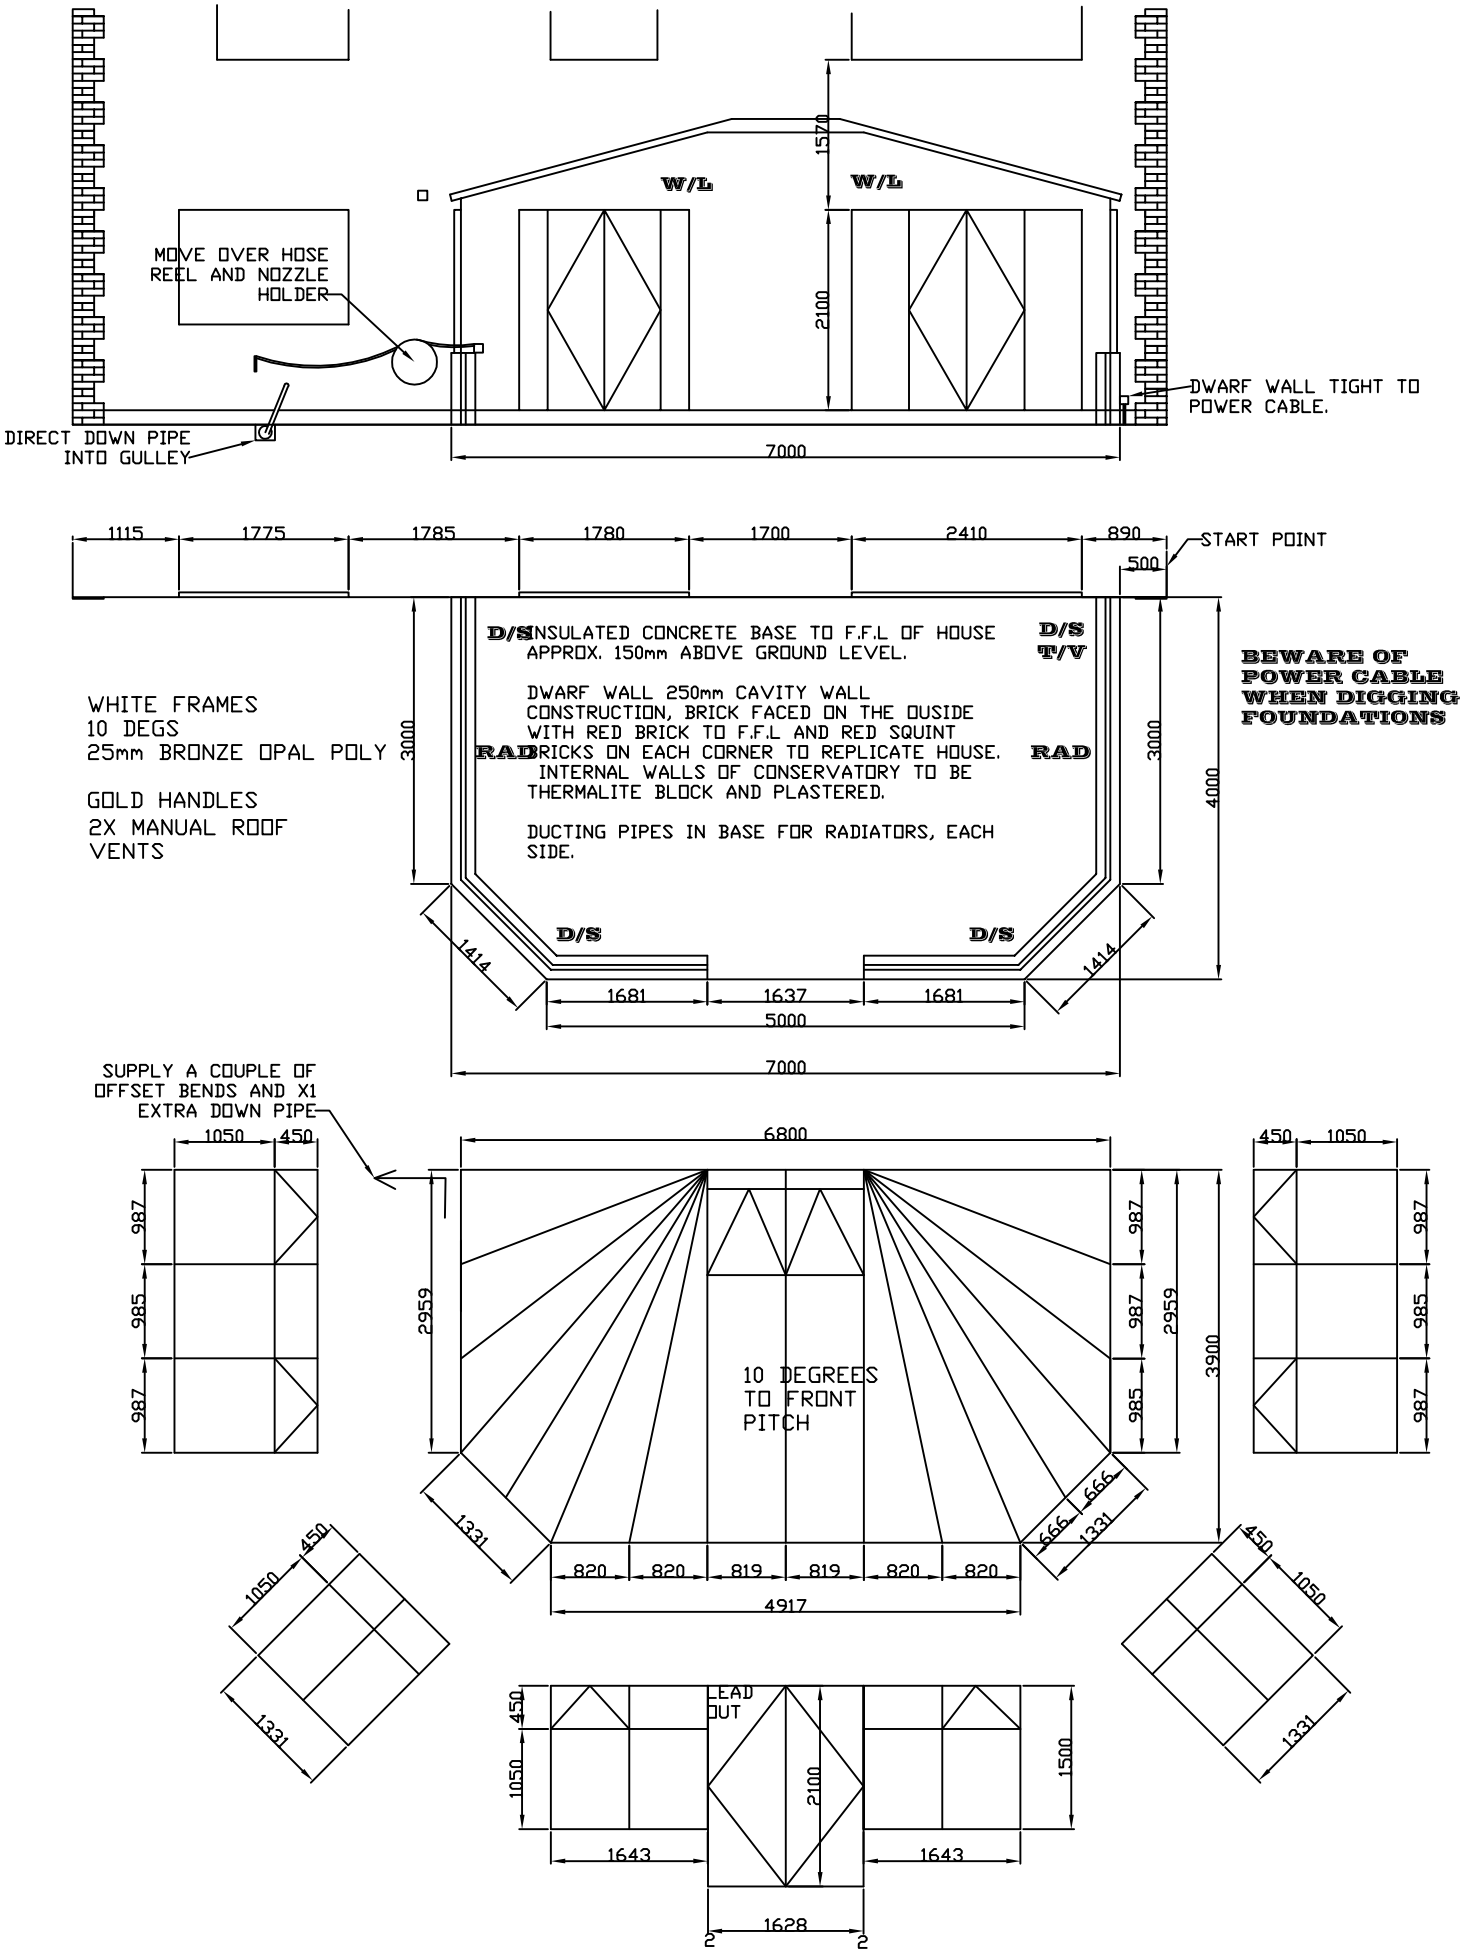
MOVE OVER HOSE REEL AND NOZZLE HOLDER
DIRECT DOWN PIPE INTO GULLEY
DWARF WALL TIGHT TO POWER CABLE.
W/L
W/L
1570
2100
7000
1115
1775
1785
1780
1700
2410
890
500
START POINT
D/S INSULATED CONCRETE BASE TO F.F.L OF HOUSE APPROX. 150mm ABOVE GROUND LEVEL.
D/S T/V
DWARF WALL 250mm CAVITY WALL CONSTRUCTION, BRICK FACED ON THE OUSIDE WITH RED BRICK TO F.F.L AND RED SQUINT
RAD BRICKS ON EACH CORNER TO REPLICATE HOUSE.
RAD
INTERNAL WALLS OF CONSERVATORY TO BE THERMALITE BLOCK AND PLASTERED.
DUCTING PIPES IN BASE FOR RADIATORS, EACH SIDE.
BEWARE OF POWER CABLE WHEN DIGGING FOUNDATIONS
WHITE FRAMES
10 DEGS
25mm BRONZE OPAL POLY
GOLD HANDLES
2X MANUAL ROOF VENTS
3000
3000
4000
D/S
D/S
1414
1414
1681
1637
1681
5000
7000
SUPPLY A COUPLE OF OFFSET BENDS AND X1 EXTRA DOWN PIPE
1050
450
987
985
987
6800
2959
10 DEGREES TO FRONT PITCH
987
987
985
2959
3900
666
666
1331
1331
820
820
819
819
820
820
4917
1331
1331
LEAD OUT
1500
2100
1643
1643
1628